





Dog Waste Station Assembly Instructions

Included Parts

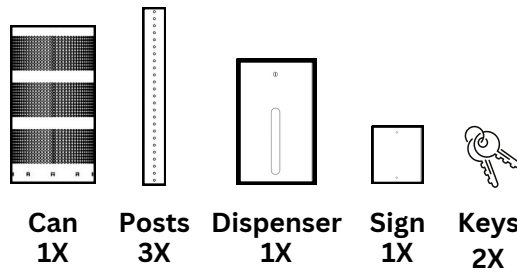


Included hardware

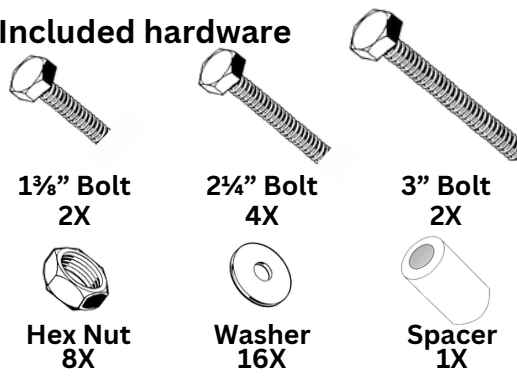

Before You Get Started


- Wear protective gloves during assembly and installation.
- Ensure all nuts are securely tightened.
- Verify the installation site is clear of buried utilities such as power, water, and gas lines.

1 Assemble the Post

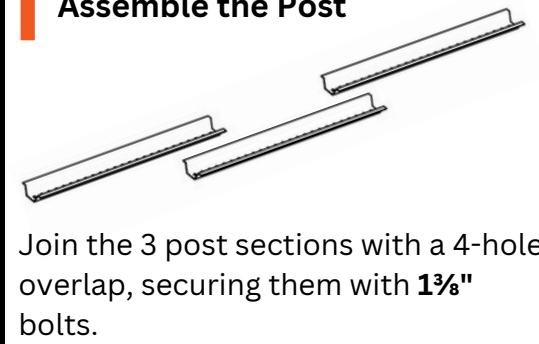


2 Install the Post

- Secure no more than 14" of the post into the ground.
- Pouring concrete is recommended for stability.

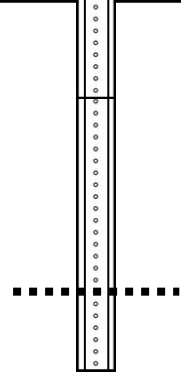


3 Mount Can

- Ensure at least 4" of clearance between the bottom of the can and the ground.
- Use a 3" bolt (no spacer) to secure the bottom of the can to the post.
- Use a 3" bolt with spacer to mount the top of the can to the post.

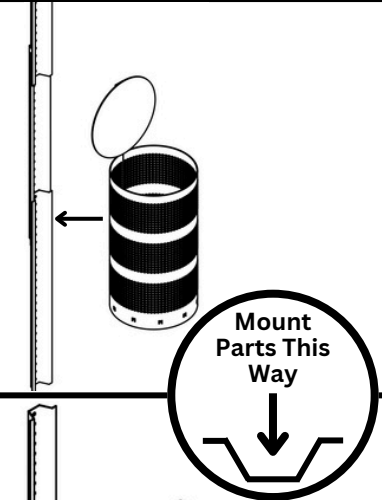


4 Mount Dispenser

- Ensure 2 inches of clearance between the raised can lid and the dispenser bottom.
- Use 2 1/4" bolts to secure the dispenser.

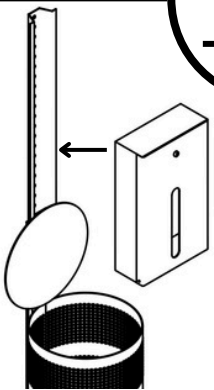

5 Mount Sign

Mount the sign 1" above the dispenser using the remaining 2 2 1/4" bolts.

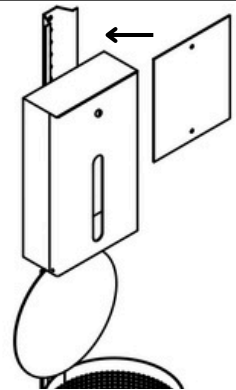

6 Stock and Lock

Stock the dispenser with **K9 Poop Bags** and lock it using the included keys.

